



## To Turn Your Camper-Trolley On.

Press and release the start button on your Camper-Trolley.

**Do not hold the start button in** as this will disconnect the hand control from the Camper-Trolley (should this occur, please follow the reconnect instructions below).

Turn your hand control on by pressing the forward button (top left) once. The light on the hand control will come on. Your Camper-Trolley is now ready to use.

### How to reconnect the hand control

1. Turn hand control on.
2. On the hand control press and hold the bottom right button, while holding this button press and hold the top right button and continue to hold both buttons until the **green light** on the hand control starts to flash and continue to hold on for five (5) seconds and then release the buttons. The light will go out.
3. Turn your Camper-Trolley on, press and hold the Camper-Trolley start button until the **green light** begins to flash and continue to hold the button for approximately 8 to 10 flashes until the **green light** flashes faster.
4. While the Camper-Trolley **green light** is flashing turn on the hand control again and the hand control will flash for 1 to 2 seconds and then stop flashing but the **green light** will now stay on.
5. You have now reconnected the hand control and the Camper-Trolley.

