

ENGLAON

12VSBV4

2.0CH Soundbar



User Manual

A compact yet powerful Bluetooth soundbar in sleek looks and excellent audio response. Two built-in speakers for soundbar which provide you with a virtualized 3D surrounding sound with the latest acoustic technologies. An integral USB port enables playback of MP3 files directly from compatible media, with further flexible input options including HDMI(ARC), USB, AUX, Coaxial and Optical. A convenient and cost-effective TV audio upgrade that doesn't compromise on performance.

- Slender and stylish design
- Two speakers with air tube for crisp, clear sound with deep bass
- Built-in 2.0 channel amplifier with 3D EQ presets
- Versatile input options to support a range of devices
- USB port for MP3 media playback

Matters Need Attention

1. Don't put this product under high temperature wet environment and it will be worse when it is in the rain or crash strongly.
2. To reduce the risk of electronic shock or fire, do not remove the cabinet cover simply contact a service professional.
3. In the rear occurrence of malfunction, do not attempt to repair the unit on your own. Contact a certified service professional for a proper diagnosis and repair.
4. If fragments or liquids fall into device box, please cut off the power right away. And it can be used only after professional staff checks it.
5. Don't install the unit in or near a place where it may come in contact with rain, moisture or other liquids.

Technical Specifications and Features

Power output: 40W

Speaker drivers: 52*75mm 20W full range speakers*2 + air tube*2

Frequency: 55Hz-12KHz

SNR: >=80dB

Bluetooth version: 5.3+EDR

Bluetooth range: Up to 10m

Connections: HDMI(ARC), USB, AUX, Coaxial, Optical, DC IN

Power adaptor: 12-30V, 4A

Dimensions: 500 x75 x80mm


LED display

- | | |
|------------------------------------|--------------------------------------|
| 1. White LED : Standby mode | 2. BLU : Bluetooth mode |
| 3. USB : USB media mode | 4. AUX : Auxiliary input mode |
| 5. OPT : Optical mode | 6. ARC : HDMI ARC mode |
| 7. COA : Coaxial mode | |

Accessories:


- | | |
|-----------------|------------------------|
| DC-DC cable x 1 | Remote control x 1 |
| HDMI cable x 1 | Wall-mounting kits x 1 |
| User manual x 1 | |

Connections

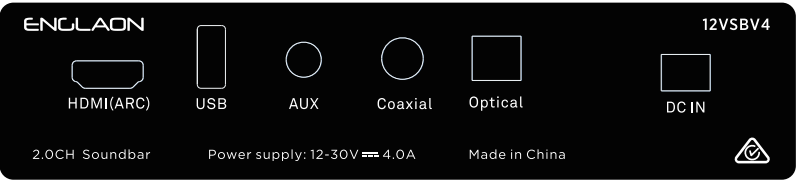

1. **HDMI ARC** : Use to connect compatible devices using a HDMI cable .
2. **USB IN** : Use to connect a flash drive for direct MP3 playback .
3. **AUX IN** : Use to connect compatible devices using the 3.5mm – 3.5mm stereo jack cable .
4. **COAXIAL IN** : Use to connect compatible devices using a coaxial cable .
5. **OPTICAL IN** : Use to connect compatible devices using an optical cable.
6. **DC IN** : Use to connect power cable.

Control panel keys

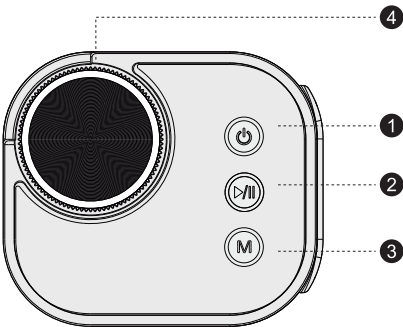

- 1 “  ”: Power ON/OFF
- 2 “  ”: Pause/Play
- 3 “  ”: Input Mode
- 4 “  ”: Volume +/-

Remote Control



BUTTON	FUNCTION	BUTTON	FUNCTION
	Power On / Off	MODE	Shifting to BT / USB / AUX / OPT / HDMI (ARC)/HDMI IN / Coaxial
	Mute or recover volume	EQ	Shifting to different EQ
VOL +	Turn up volume		USB Repeat Mode
VOL -	Turn down volume	TREBLE+	Increase the Treble
	Previous Track	TREBLE-	Decrease the Treble
	Pause / Play	BASS+	Increase the Bass
	Next Track	BASS-	Decrease the Bass
BT	Bluetooth Mode	3D	3D surround sound on / off

Input Functions

- **Equalizer modes:** The soundbar has 3 equalizer presets, tailored to complement various styles of music. Press the EQ button on the remote to choose between Music (EQ1), Movie(EQ2), News (EQ3).
- **HDMI(ARC):** Connect an HDMI ARC compatible device to the HDMI(ARC) port on the soundbar using a HDMI cable. Select HDMI(ARC) mode either by pressing the HDMI(ARC) button on remote control or the MODE button on the soundbar control panel until *ARC* is displayed on the LED display. Ensure HDMI ARC is selected as the TV's audio output, then adjust the volume of soundbar by pressing the Volume up and Volume down buttons on the remote control or soundbar control panel.
- **AUX in:** Connect a compatible device using the 3.5mm - 3.5mm stereo jack cable. Select AUX mode either by pressing the MODE button on your remote control or repeatedly pressing the MODE button on the soundbar control panel until *AUX* is displayed on the LED display. Ensure the connected device is producing an audio signal, then adjust the volume of soundbar using the Volume up and Volume down buttons on the remote control or soundbar control panel.
- **Optical in:** Connect a compatible device to the OPTICAL input on the soundbar using a digital optical cable. Select OPT mode either by pressing the MODE button on your remote control or repeatedly pressing the MODE button on the soundbar control panel until *OPT* is displayed on the LED display. Ensure Optical SPDIF or External device output is selected as the TV's audio output, then adjust the volume of the soundbar using the Volume up and Volume down buttons on the remote control or soundbar control panel.

• **Coaxial in:** Connect a compatible device to the COAXIAL input on the soundbar using a digital coaxial cable. Select COAX mode either by pressing the MODE button on your remote control or repeatedly pressing the MODE button on the soundbar control panel until COAX is displayed on the LED display. Ensure Coaxial SPDIF or External device output is selected as the TV's audio output, then adjust the volume of the soundbar using the Volume up and Volume down buttons on the remote control or soundbar control panel.

• **Bluetooth:** Press the BT button on the remote control or repeatedly pressing the MODE button on the soundbar control panel until BT is shown on the LED display. The LED display will flash to indicate that the soundbar is in Bluetooth pairing mode. Ensure that the device you wish to connect is also in pairing mode and search for "ENGLAON 12VSBV4" in its device list. When the two devices are paired, the LED display on the soundbar will stop flashing and remain constant. (The soundbar will now automatically re-pair with this device whenever it is within range and has Bluetooth turned on.)

• **USB media mode:** The soundbar is compatible with USB flash drives of up to 64GB (Fat32 format) in size and can play MP3 files directly. Simply insert a compatible drive into the USB port on the back of the soundbar and the unit will automatically switch to USB mode and play the first compatible track.

USB repeat mode (also accessed via the remote control) enables single track repeat (ONE), all track repeat (ALL), ORDER, Random (SHUFF).

The media player also has a memory function that will recall and continue from the last-played point when a USB flash drive that has previously been used with the soundbar is reinserted.

ENGLAON

62 Merri concourse

Campbellfield VIC 3016

03 91213737

WWW.ENGLAON.COM