

1



#### ADD OIL:

Place unit on a flat surface, open access panel, remove oil fill cap/dipstick. With provided funnel, add 0.38 L of SAE 10W-30 oil. Replace fill cap/dipstick.

2



#### ADD FUEL:

Fill with fresh, unleaded fuel. Capacity: 4.2 L. Min. 87 Octane, 0-10% Ethanol

3



#### STARTING MX2000iS:

**3a:** Disconnect any electrical devices and Switch LOW IDLE to OFF



**3b:** Move generator to well ventilated area.



**3c:** Turn fuel cap air vent to "ON".



**3d:** Turn MULTI-Switch to START/CHOKE position if engine is cold. Use RUN position if engine is warm



**READ & UNDERSTAND YOUR OWNERS MANUAL & ALL WARNINGS BEFORE RUNNING YOUR GENERATOR**



Once engine starts and stabilizes, rotate MULTI-Switch from "Choke/Start" position to RUN.

4


#### TO STOP:

**5a:** Disconnect electrical items from unit.

**5b:** Rotate MULTI-Switch to STOP.

**5c:** Turn fuel cap air vent to "OFF".

5

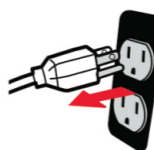

### ⚠ DANGER

Using a generator indoors CAN KILL YOU IN MINUTES. Generator exhaust contains carbon monoxide. This is a poison you cannot see or smell.



NEVER use inside a home or garage, EVEN IF door and windows are open.



Only use OUTSIDE and far away from windows, doors, and vents.

MX2000iS



MX2000iY

### PARALLELING MADE EASY! QUICK & SIMPLE SET-UP:

- 1) Make sure all power cords are disconnected from generators
- 2) Connect the two generators with the parallel cables supplied; Red to Red / Black to Black / Ground to Ground connection. NOTE: Only use factory supplied cables
- 3) Start both units (refer to starting procedures in manual)
- 4) One of the units can be used for maximum power output of 3000 watts
- 5) Do not disconnect parallel cables while generator is running and power cords connected

**CAUTION!** Your generator has been shipped without engine oil. **DO NOT** add fuel or start the engine before adding oil. See owner's manual for instructions.

**CRANKCASE CAPACITY:**  
0.4 Quart • 0.38 Liter • 12.8 Ounce • SAE 10W-30