

MXPW3200/T

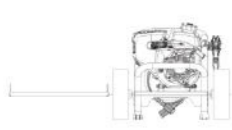
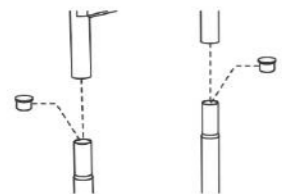
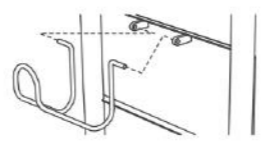

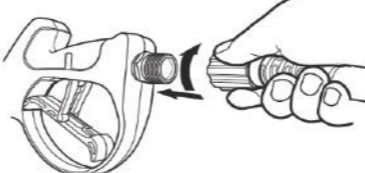

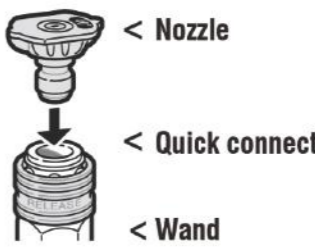

Pressure Washer Quick Start Guide



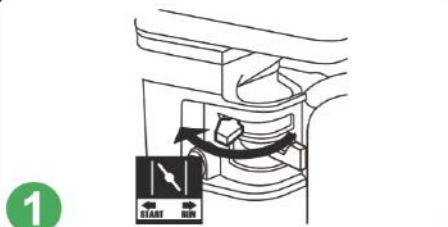

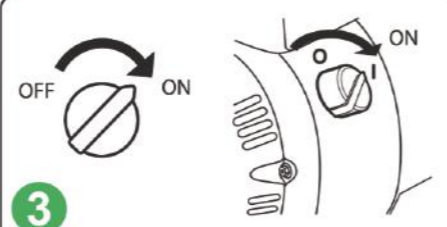


READ AND FOLLOW OWNER'S MANUAL PRIOR TO USE

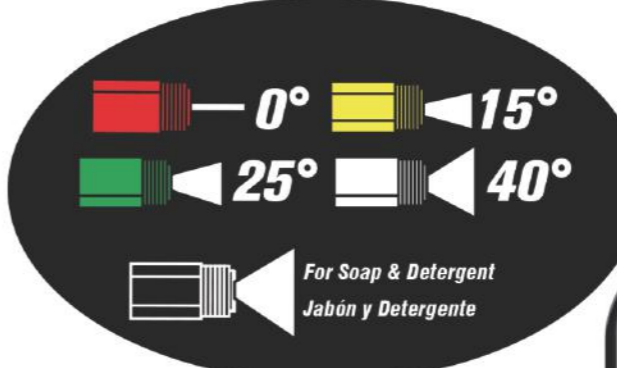


PRIOR TO STARTING

 <p>Assemble handle</p>	 <p>Attach hose holder to panel</p>	 <p>Attach the hose Holder to the Panel.</p>	 <p>Connect pressure hose to pump</p>	 <p>Connect pressure hose to spray gun</p>	 <p>Connect wand to spray gun</p>	 <p>Attach nozzle to wand via quick connect</p>	 <p>Connect to water source & turn ON</p>
--	--	--	--	---	--	--	--





STARTING

 <p>1 Choke position: START to start cold engine, RUN to restart warm engine</p>	 <p>2 Open fuel valve</p>	 <p>3 Turn engine switch ON</p>	 <p>4 Pull recoil handle until engine starts</p>	 <p>5 Move choke lever slowly to RUN position</p>
---	---	--	--	---



0° 15°
25° 40°
For Soap & Detergent
Jabón y Detergente

STOPPING

 <p>Lock the guntrigger</p>	 <p>Turn engine switch OFF</p>	 <p>Turn choke lever and fuel valve lever OFF</p>	 <p>Turn water supply OFF</p>	 <p>Release pressure</p>
---	---	---	--	---

Failure to read and follow instruction in manual(s) could result in death, bodily injury, and/or property damage.

