

Appendix A1 LEAD ACID MODE


VERSION: REV. 1.0



Charger configuration is a simple step by step process as shown below.

For Tech Support call Enerdrive on **1300 851 535**

NOTE: The current setting below is based on the EN3DC30-24 battery charger.

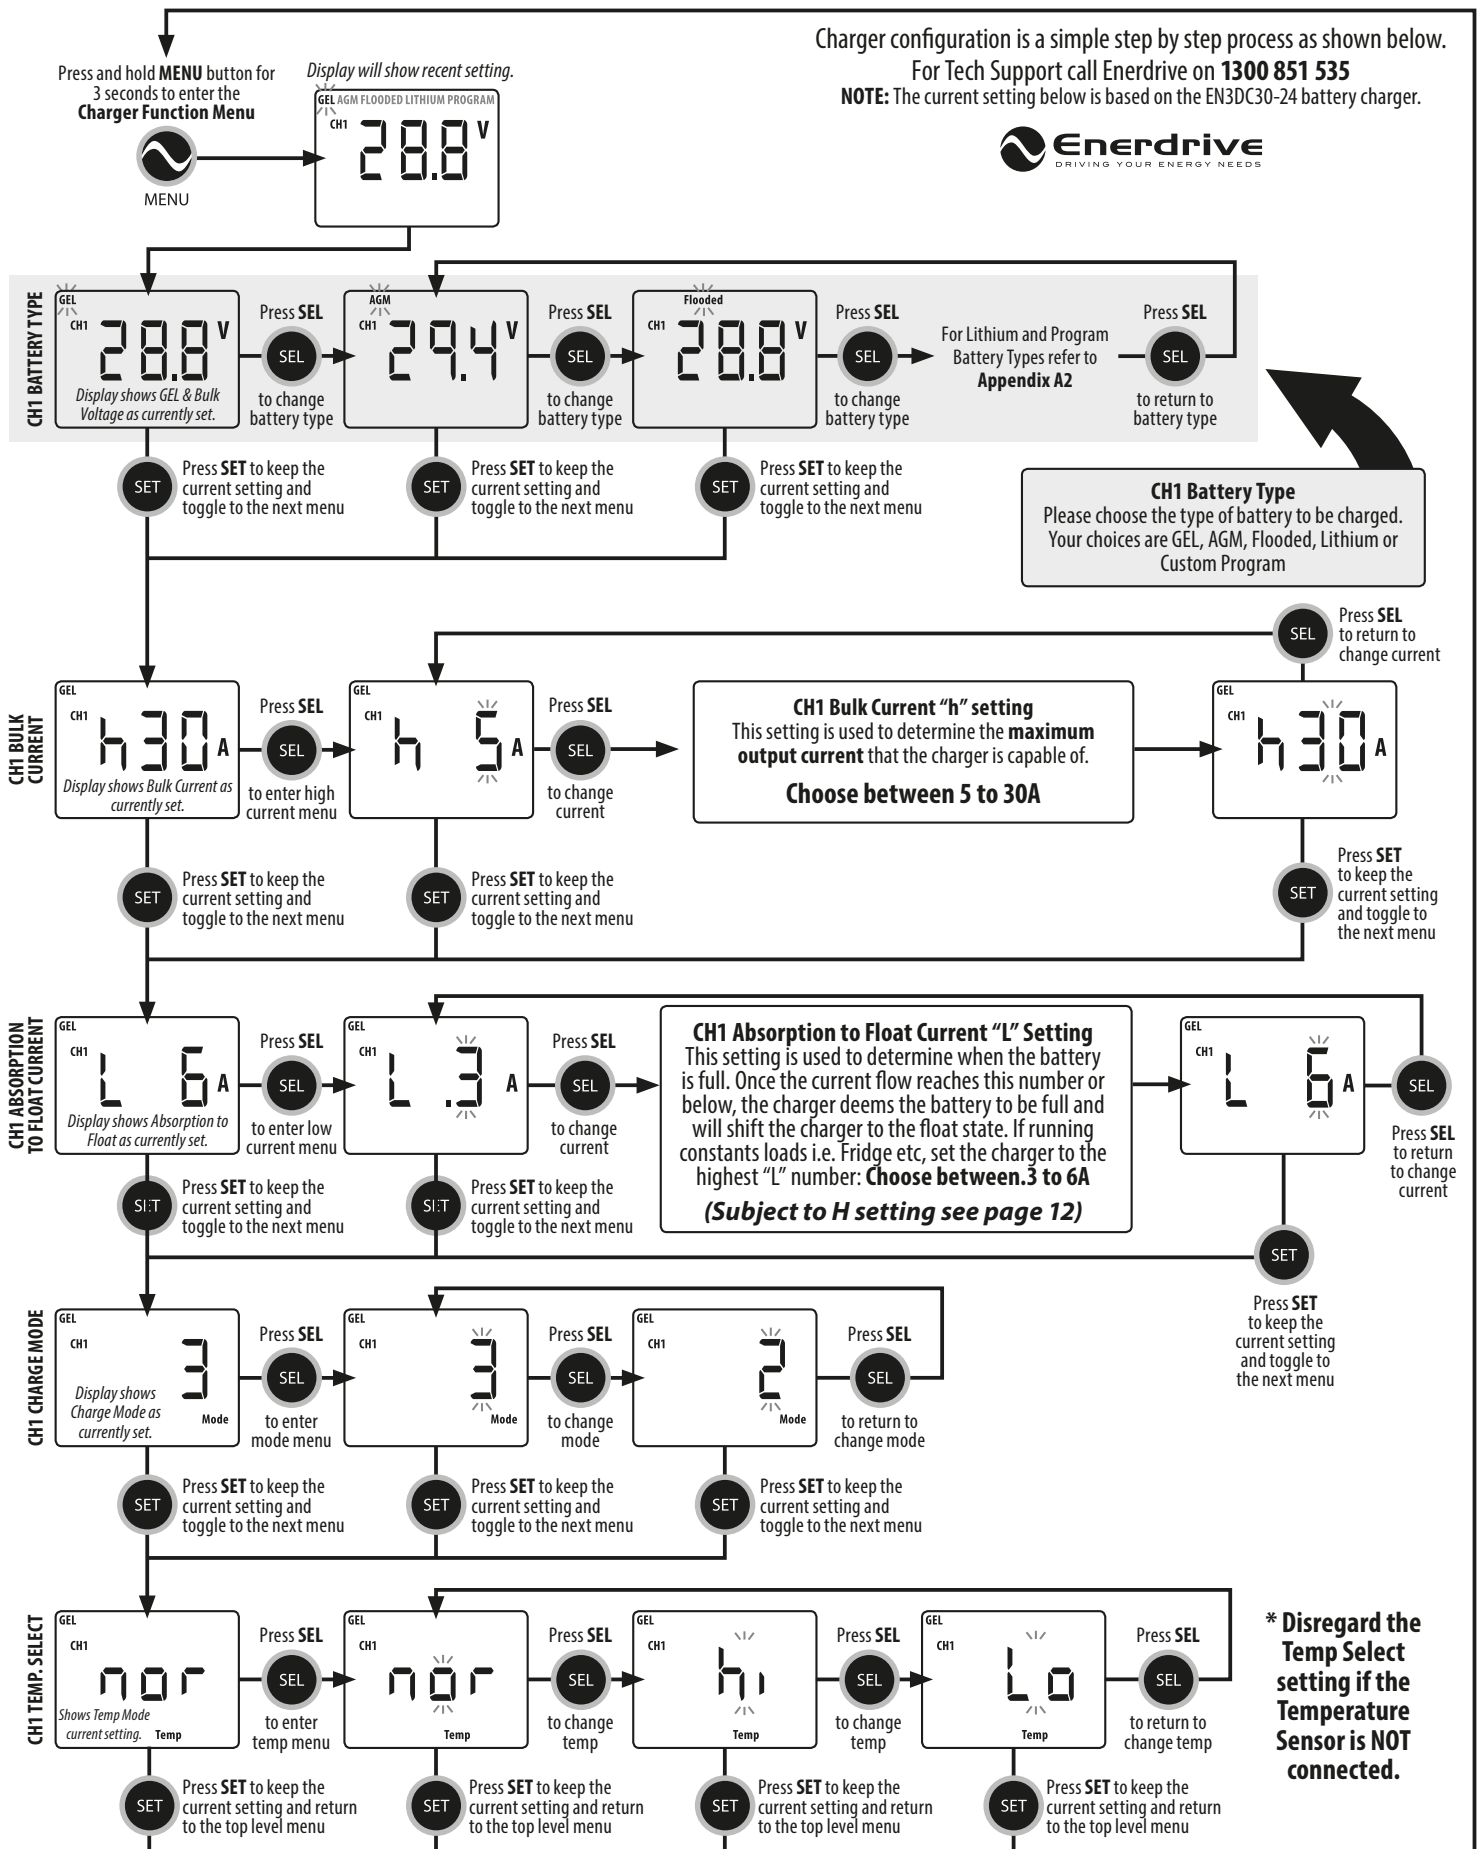

NOTE: At any function setting, pressing the **MENU** button will exit the function mode.

WARNING: FIRE HAZARD

When choosing the battery type and setting the charging parameter, please consult the battery manufacturer on all the voltage and current settings. Using the wrong setting to charge a battery may overcharge, damage the battery and may cause a fire.

Appendix A2 LITHIUM MODE


VERSION: REV. 1.0



Charger configuration is a simple step by step process as shown below.

For Tech Support call Enerdrive on **1300 851 535**

NOTE: The current setting below is based on the EN3DC30-24 battery charger.

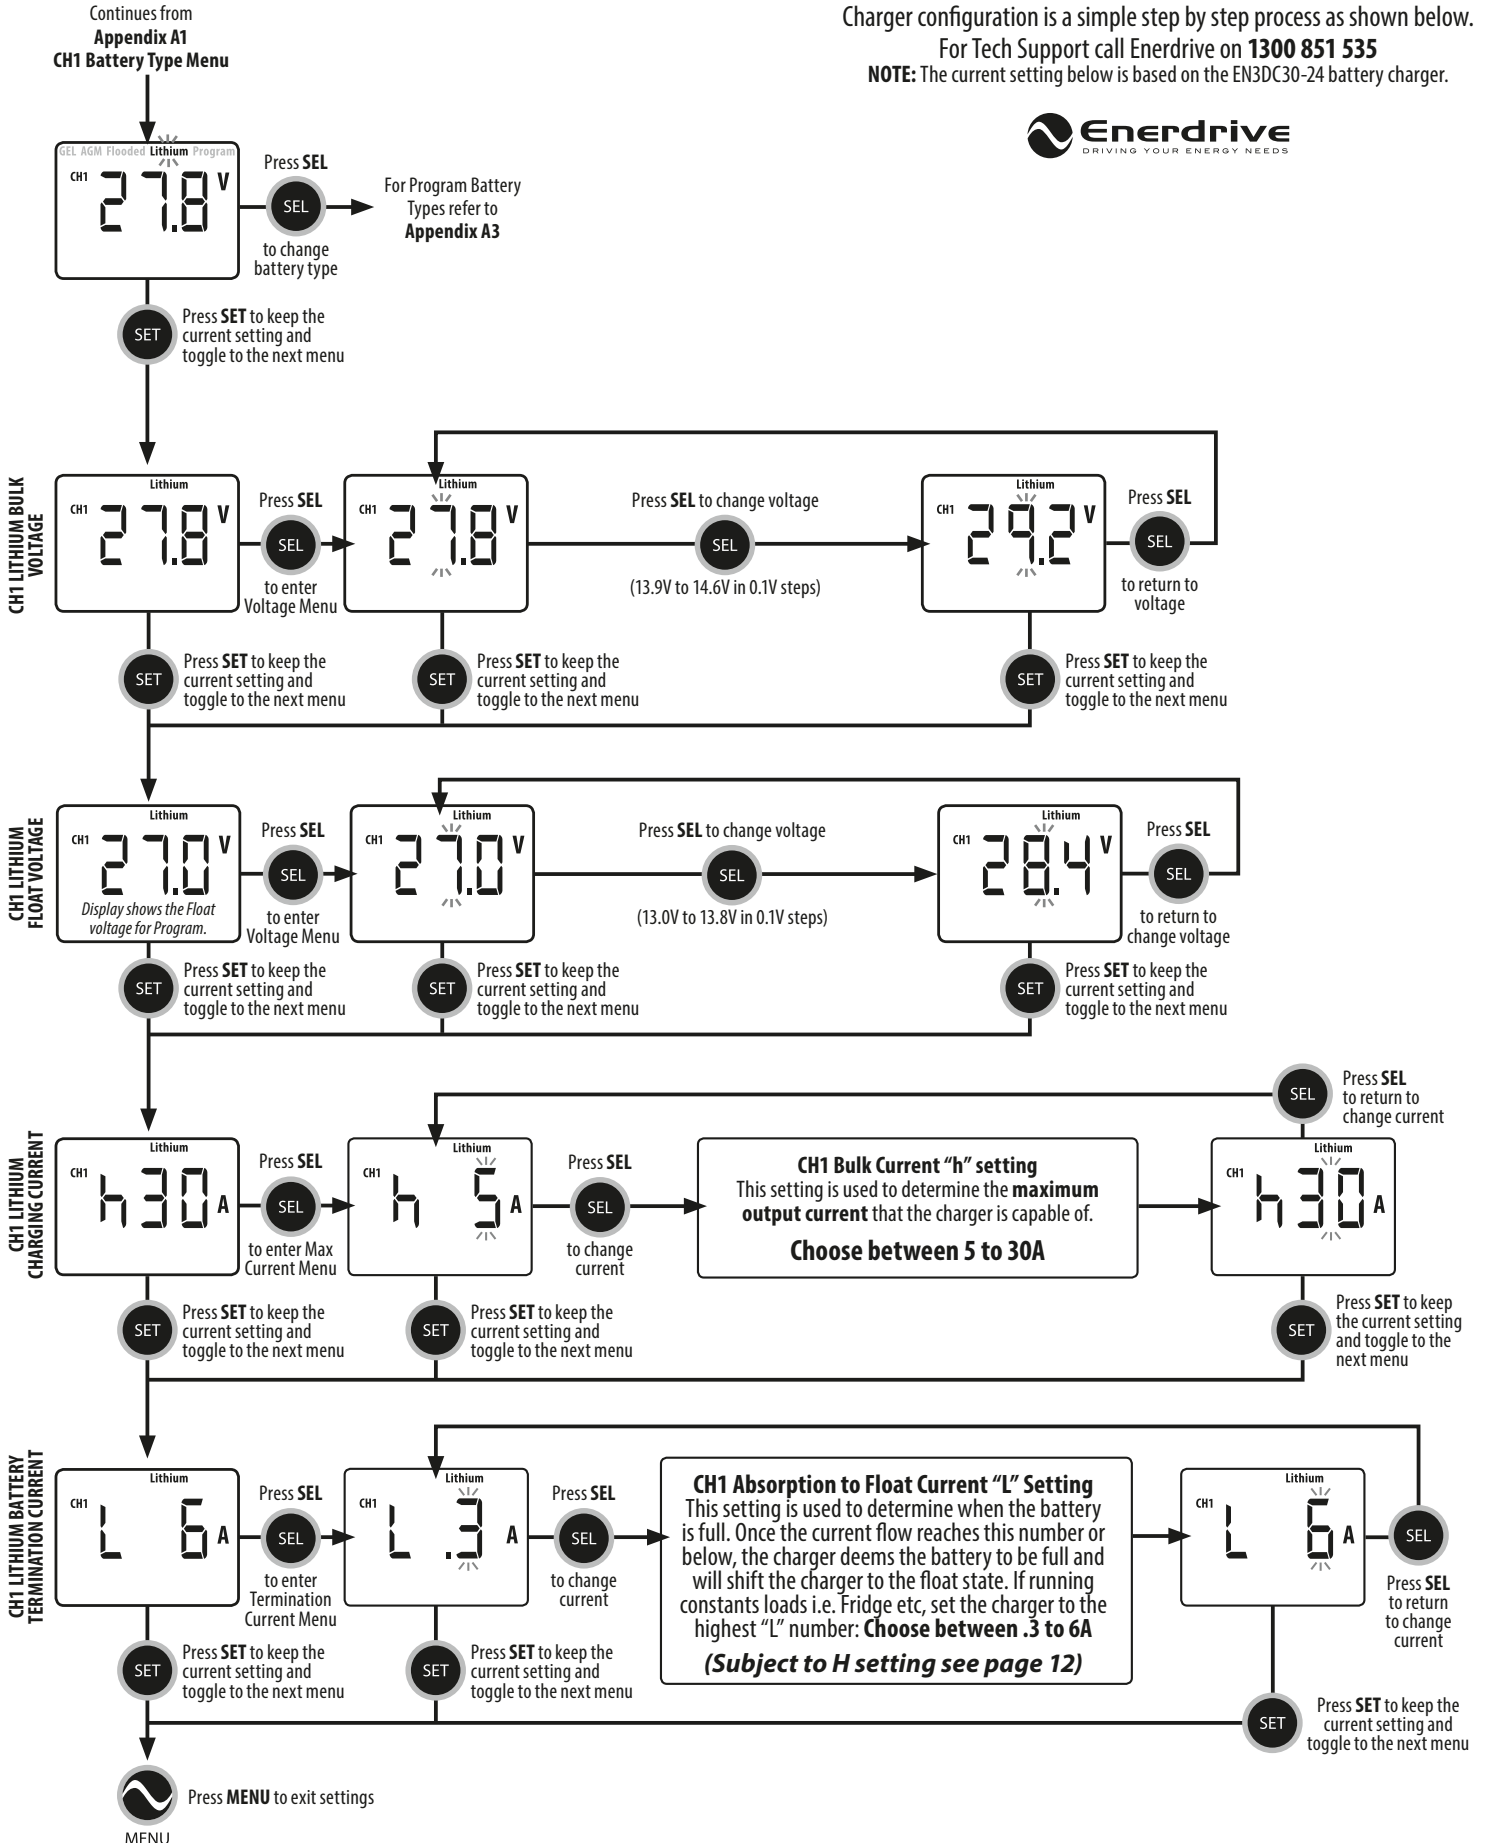

NOTE: At any function setting, pressing the MENU button will exit the function mode.

WARNING: FIRE HAZARD

When using the Lithium Battery type setting to set the battery charging parameters, please consult the battery manufacturer on all the voltage and current settings. Using the wrong setting to charge battery may overcharge, damage the battery and may cause a fire.

Appendix A3 PROGRAM MODE


VERSION: REV. 1.0



Charger configuration is a simple step by step process as shown below.

For Tech Support call Enerdrive on **1300 851 535**

NOTE: The current setting below is based on the EN3DC30-24 battery charger.

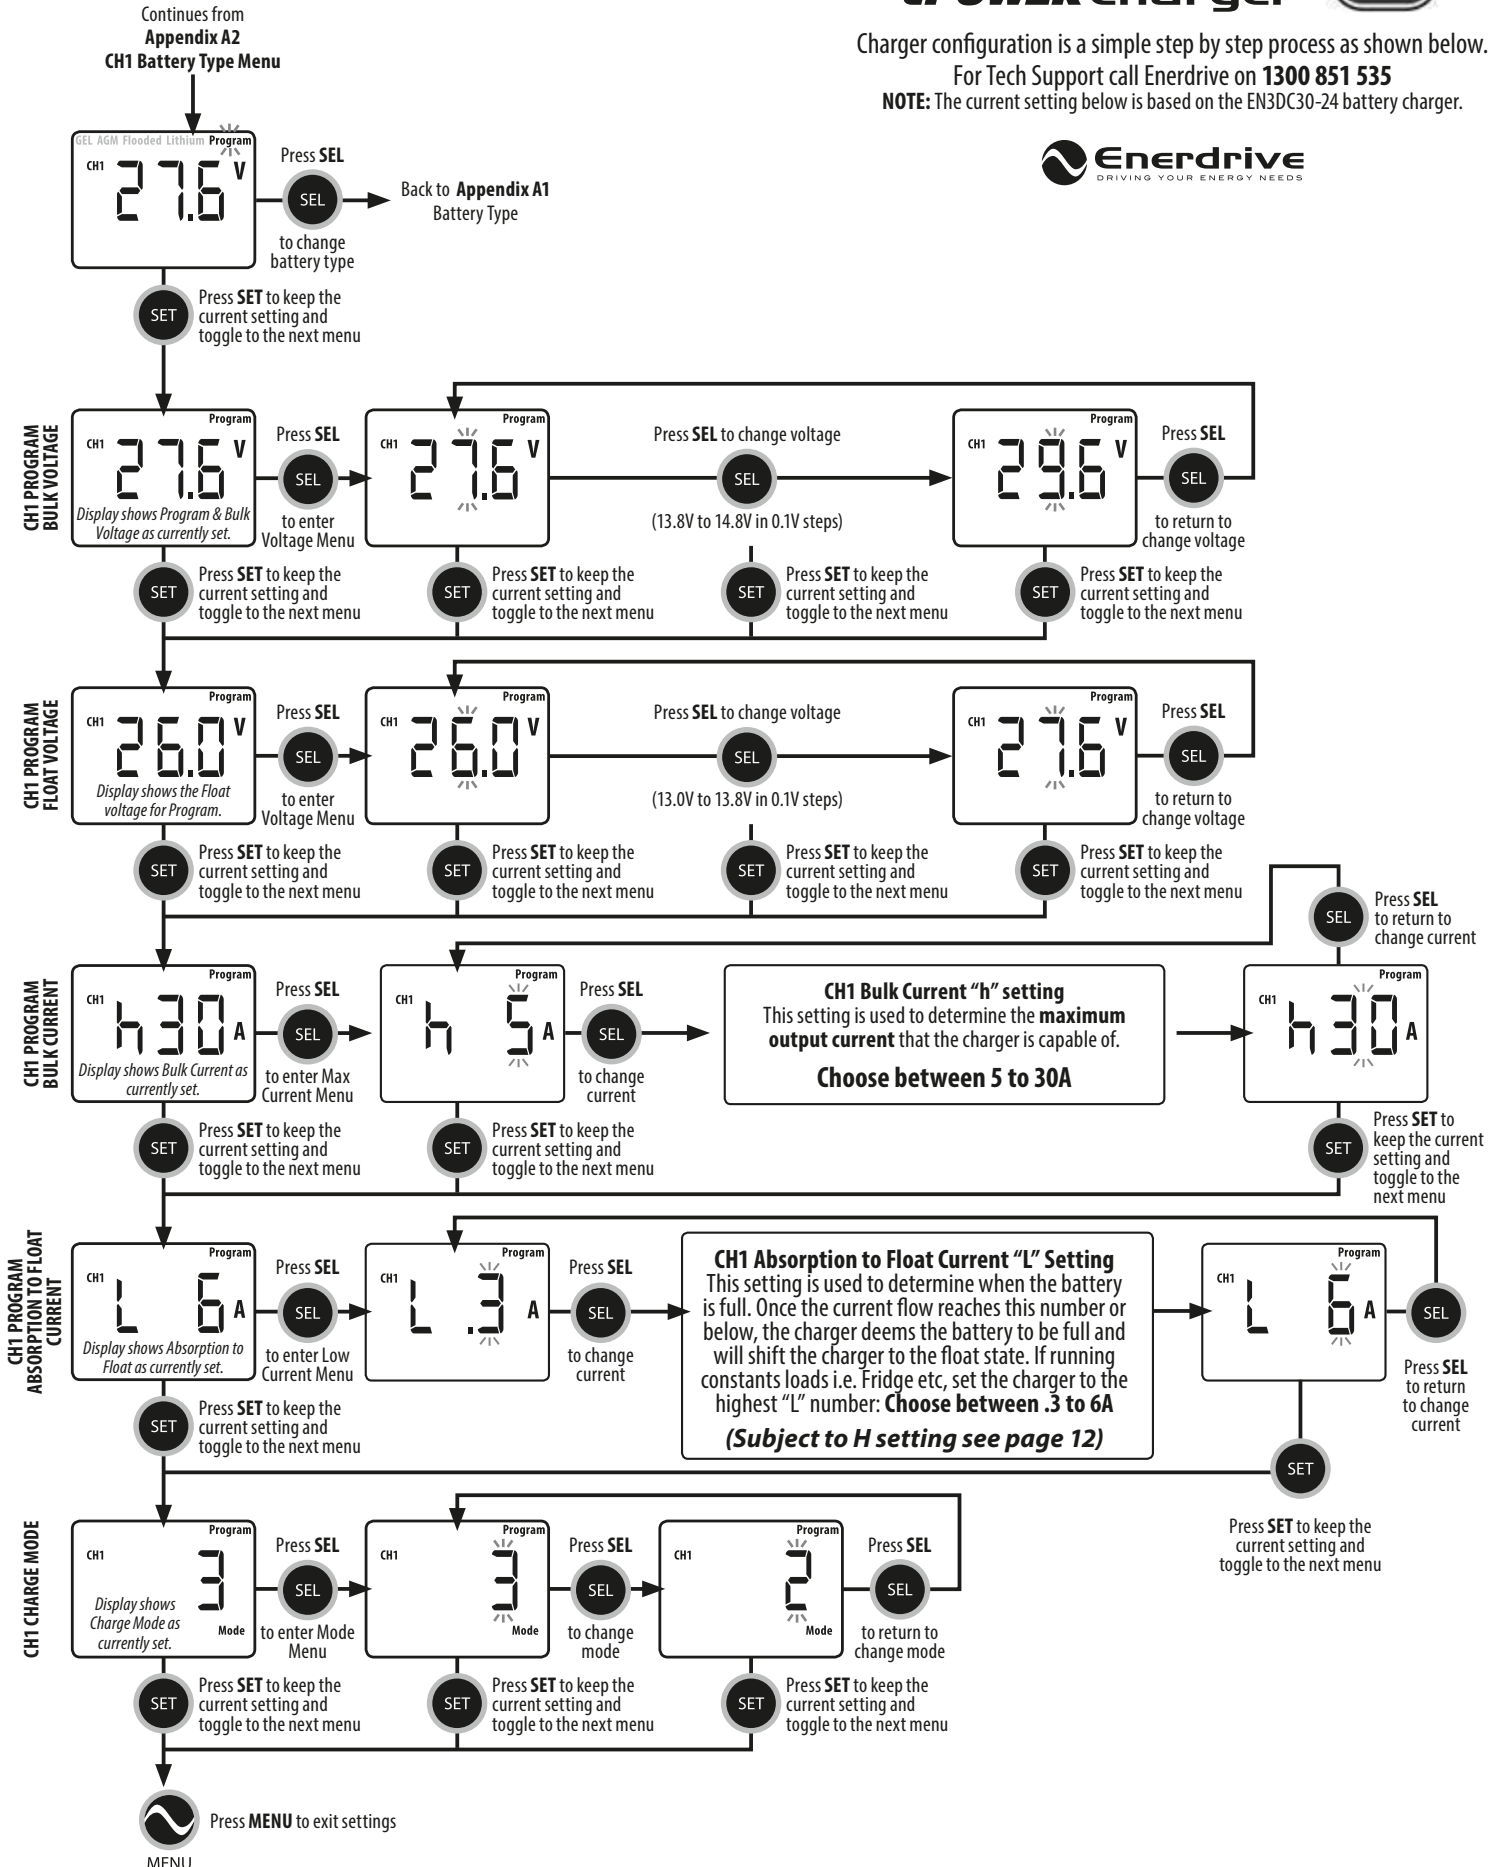

NOTE: At any function setting, pressing the MENU button will exit the function mode.

WARNING: FIRE HAZARD

When using the Program Mode to set the battery charging parameters, please consult the battery manufacturer on all the voltage and current settings. Using the wrong setting to charge battery may overcharge, damage the battery and may cause a fire.