



MID25GP/MID32GP

Fully Automatic Washing Machine

OPERATION MANUAL

Please read and keep this manual for maintenance and operation of this washing machine.

ERROR CODES

Other functions

Function of fault alarm

Error code	Indication of fault	Solution of alarm
The indicator flashes and shows "E1"	No water flow	* Check that the water tap is open. * Check mains pressure connection to RV. * Check the water inlet filter screen After the above is rectified, open and close the lid to reset the washing machine.
The indicator flashes and shows "E2"	Lid is open	Ensure that the lid is completely closed. Open and reclose the lid.
The indicator flashes and shows "E3"	Out of balance	* Ensure that the washing machine is level and stable, adjust as required. * If the clothes are uneven, adjust the washing load. After the above is rectified, open and close the lid to reset the washing machine.
The indicator flashes and shows "E4"	Drain alarm	* Ensure drain hose is no higher than 100cm from the ground level. * Do not cover the end of the drain pipe, this MUST drain freely. After the above is rectified, open and close the lid to reset the washing machine.

Should the display show an error "F1" please isolate both power and water and contact the service centre for assistance.

Automatic power off function

1. Should the machine be turned on, with no program selected within 10 minutes, the machine will power off automatically to save power
2. After the washing program has finished the buzzer will sound six times to alert you that the cycle has finished and will power off to save power.

Out of balance adjustment

1. If the clothes are uneven around the spin dry tub, the safety device will activate and may stop the spin process, the washer may automatically revert to rinse mode to help to adjust the washing load. After the tub is balanced the spin mode will resume.
2. This function will activate twice if needed, if there is no change, the alarm "E3" will be activated.

TROUBLESHOOTING

Troubleshooting


Symptom	Cause	Solution
No indication in controller	<ul style="list-style-type: none"> * The power lead may be Disconnected. * The power point may be off. * The machine is not switched on or is in Auto power off function. 	<ul style="list-style-type: none"> * Check the power lead to the machine and power point is on. * Check the Main safety switch in RV or Pole. * Press the "POWER" button.
* Leaking from the Water Inlet hose or fittings.	<ul style="list-style-type: none"> * Incorrect fitment of the inlet hose. * Faulty Water inlet hose. 	<ul style="list-style-type: none"> * Check for correct fitment. * Replace water inlet hose.
Drain failure	<ul style="list-style-type: none"> * The Drain hose is mounted too high. * The drain hose is clogged or blogged. 	<ul style="list-style-type: none"> * Adjust the drain hose. * Check that the drain hose is not blocked and can flow freely.
* Water fill failure	<ul style="list-style-type: none"> * Poor Water Flow * Restricted water inlet filter 	<ul style="list-style-type: none"> * Check water supply connections. * Check water inlet filter screen.
* Water fill during Spin cycle	<ul style="list-style-type: none"> * Clothes are uneven in the tub 	<ul style="list-style-type: none"> * If the clothes are uneven around the spin dry tub, the safety device will activate and may stop the spin process, the washer may automatically revert to rinse mode to help to adjust the washing load. After the tub is balanced the spin mode will resume.
* No spin mode after Rinse mode.	<ul style="list-style-type: none"> * The lid has been opened and may not be closed. 	<ul style="list-style-type: none"> * Check to ensure that the lid is correctly closed.

INDEX


Names of respective parts-----	2
Specifications-----	2
Precautions-----	3
Simple installation-----	4
Installation of the base cover -----	4
Installation of the water inlet hose -----	5
Power source and grounding-----	5
Alteration of the drain direction-----	6
Installation of the drain hose(only upper-drain)-----	6
Control panel design-----	7
Fully automatic program -----	8
Preparations before washing-----	8
Program time list-----	8
Self program-----	8
Operation method-----	9
Begin to wash clothes-----	9
Use the cleansing solution for twice-----	9
Pre-wash of the dirty clothes-----	9
Volume of washing and detergent-----	10
Weight standard of the washing-----	10
Method of maintenance-----	11
Troubleshooting-----	12
Error codes-----	13

NAME of RESPECTIVE PARTS and SPECIFICATIONS

Names of respective parts

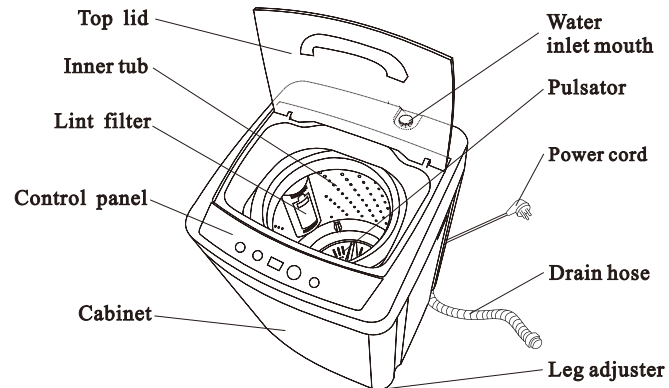

Accessories

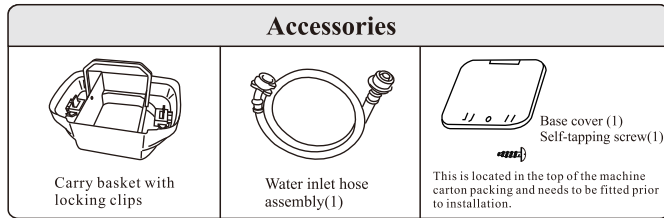

Specifications


 

Size	2.5kg	410x420x640(mm)	Weight of the product	2.5kg	16kg
	3.2kg	410x420x740(mm)		3.2kg	18.5kg
Rated input power	235W		Rated volume of wash and spinning	2.5kg	2.5kg(dry clothes)
				3.2kg	3.2kg(dry clothes)
Rated voltage	240V~		Maximum water pressure permitted in the water inlet	0.6Mpa	
Rated frequency	50Hz		Minimum water pressure permitted in the water inlet	0.1Mpa	

NOTICE: Ensure that a Pressure limiting valve is used if the pressure is outside the above specifications.

METHOD of MAINTENANCE

Method of maintenance

Prior to any maintenance or service, please ensure that the power and water have been correctly isolated to the machine.

After ending of the program	Maintenance of shell
<p>* At the end of a completed washing program, the machine will sound to alert you that the cycle has been completed. Remove the clothes from the machine and insert the foam support if washing is completed.</p> <p>* To reduce the risk of electric shock and water leaking, isolate the water and power supply while not in use.</p>	<p>Use a damp gentle cloth to wipe clean the washing machine. Avoid the use of harsh detergents or chemicals as it may damage the surface of the washing machine.</p> 
Cleaning of the lint filter	Cleaning of the water inlet
<p>After each completed washing cycle ensure that the Lint filter is cleaned.</p> <ol style="list-style-type: none"> 1. Remove the lint filter from the tub. 2. Carefully open the filter and remove the lint. 3. Refit the lint filter back into the unit. 	<p>Periodically clean the water inlet filter screen as this maybe blocked by debris.</p> <ol style="list-style-type: none"> 1. Turn off the water source and switch on the power. 2. Start the washing machine cycle and continue for 5 seconds (this allows the water in the hose to flow and removes any pressure in the line) then power off the machine. 3. Remove the water inlet hose, take out the water inlet filter screen from the inlet valve, clean the filter, refit the filter and reconnect the water inlet hose. 

OPERATION METHOD

Volume of washing and detergent

For 2.5kg













Weight of washing	Water level	Water volume	Dosage of the washing powder
1.0~2.5kg	High	About 20L	25g
<1.0kg	Low	About 15L	18g

For 3.2kg

Weight of washing	Water level	Water volume	Dosage of the washing powder
2.5~3.2kg	High	About 26L	32g
1.7~2.5kg	Med	About 23L	25g
1.0~1.7kg	Low	About 19L	18g
<1.0kg	Min	About 15L	15g

* Please follow the above as a guide, always read the usage and dosage instructions on the detergent used.

Weight standard of the washing


 Union coat about 800g	 Jacket(cotton) about 800g	 Jeans about 800g	 Towel quilt (cotton) about 900g
 Single bedsheet (cotton) about 600g	 Dungaree(1sets) about 1120g	 Pyjamas about 200g	 Long sleeves shirt (blended) about 300g
 Short sleeves shirt (cotton) about 180g	 Trunks (cotton) about 70g	 Socks (blended) about 50g	 Bath towel (cotton) about 300g

PRECAUTIONS

Precautions

Safe use of power

This washing machine is to be used on Australian and New Zealand 3pin 240V outlets only.

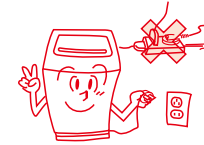

Avoid from installing in damp areas

To reduce the risk of Electric shock, do not place the washing machine in extremely high areas of moisture.



Don't use hot water

This washing machine is for cold water connection only!



Do not place your hands in the tub while spinning

Please avoid from opening the lid while the unit is in operation. It is very dangerous to place your hands in the tub while it is spinning.



Avoid from spraying with water

Do not spray the washing machine with water, to clean use a damp soft cloth and wipe as required.



Keep away from smoke and fire

Don't place lighted candles, cigarettes, mosquito-repellent incense and thermos bottles nearby to avoid fire accidents or deformation of the plastics.



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.


SIMPLE INSTALLATION

Simple installation

- Step 1: The washing machine should be placed inside the room with a flat floor, which is convenient for water supply and drain, has low moisture and no direct sunshine, and does not freeze in winter.
- Step 2: All foam packing (including the fixing frame on the base foam) should be taken off, otherwise the washing machine will not work.
- Step 3: Adjust by either screwing in or out the leg adjuster and when the machine is level on all 4 corners, lock off the outer adjustment to hold in place. (The Leg Adjuster is located on the front right hand side of the machine.)

NOTE:


If the washing machine is not placed flat (the inclination angle is over 2°), it may cause great vibration or automatic check and rectification or other abnormal circumstances will often take place in the course of spinning.

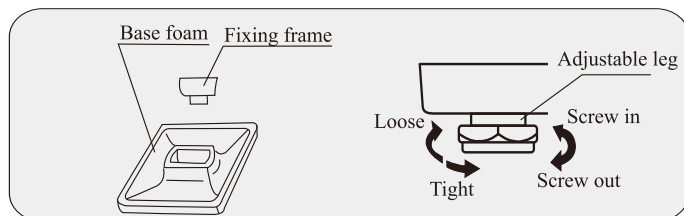

Step 4: Installation of the base cover

Place the washing machine down to the front and rest on a soft blanket and screw in place the lower base cover.

NOTE: The washing machine must not be placed on carpet pile, to where this blocks the lower ventilation of the unit.

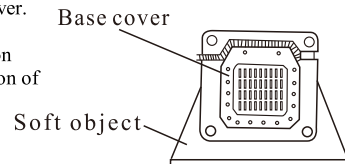

OPERATION METHOD

Operation method

Begin to wash clothes

1. Select the proper water level according to the quantities of clothes.
2. Select the programs and process.
3. Close the lid and press "START/PAUSE" button.

Pre-wash of the dirty clothes

As for seriously stained dirty clothes with mud, one of the "Rinse-spin" program can be selected to perform pre-washing, and then add washing powder and select the fully automatic program to wash them.

FULLY AUTOMATIC PROGRAM

Preparations before washing

1. Check that the drain hose is correctly fitted.
2. Connect the water inlet hose and open the tap.
3. Put the power plug into the socket.
4. Take out the coins and other sundries and shake off the mud and sand on the clothes.
5. Place the clothes and the detergent into the tub.

Program Time List

Process	Wash time(min)	Rinse times/time(min)	Spin time(min)	Total time (min)
Wash&Rinse&Spin	Subtly(10)	Normal for twice(15)	Normal(5)	About 30
Wash&Rinse	Subtly(10)	Normal for twice(15)		About 25
Rinse&Spin		Normal for twice(15)	Normal(5)	About 20
Spin			Normal(5)	About 5
Rapid	Subtly(6)	Normal for once(8)	Normal(4)	About 18


Program selection

- According to needs, press the "PROCESS" button, the indicating lights move in turn, you may optionally select "WASH&RINSE&SPIN", "WASH&RINSE", "RINSE&SPIN", single "WASH", single "RINSE", single "SPIN".
- After starting, If you want to re-set "PROGRAM" "PROCESS" "WATER LEVEL", Please press the "PAUSE" button to re-set programs, then press the "START" button to run new program.

SIMPLE INSTALLATION

Step 5: Installation of the water inlet hose

1. Connect the 90Deg end of the water inlet hose to the washing machine.
2. Connect the other end of the water inlet hose to the COLD Water outlet.
3. Ensure that the fitting is not forced or cross threaded as this will damage the fitting.
4. Open the tap to charge the line with water, check the hose fittings to make sure that no water leaks are noted. If water is found to be leaking, close the tap and you will need to check the connection correctly.

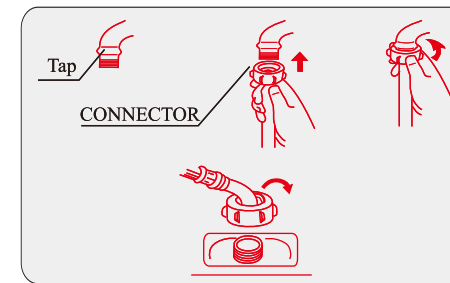

NOTE: You must use new water inlet hose in the attachments. Old water inlet hose does not be used again and again.


Step 6: Power source and grounding

The washing machine employs alternative current with the rated voltage and frequency. When the voltage fluctuates between 10% of rated voltage, the washing machine can work normally. A special power socket for the washing machine had better be set beside the washing machine for convenience and safety. The method of connection of the socket is as the figure below:

SIMPLE INSTALLATION



Notices:

- The socket and the grounding wire must be installed by an electrician to prevent incorrect installation or use of the socket, and to guarantee the safety of use of electricity.
- The power wire of the washing machine employs Y connection and the replacement of the power wire should be carried out by professionals.
- No connection of the grounding wire with the neutral wire, otherwise the cabinet will be charged, which is likely to cause the danger of electric shock.

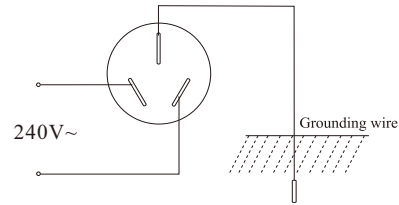

Step 7: Alteration of the drain direction (Factory set for Right hand side connection)

1. Put the washing machine down to the front, then screw off the screws by crosshead screwdriver and remove the base cover.
2. Pull the drain hose out from trench. Tune to left and put into the trench.

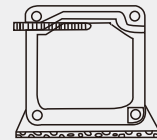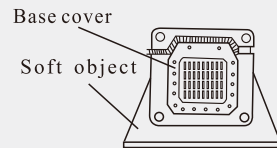


3. Put the base cover back again.

Step 8: Installation of the drain hose(only upper-drain)


- The drain hose must be no higher than 100cm from the ground level.

NOTE: Make sure that the drain hose can not be blocked, as this will lead to a drain alarm fault.

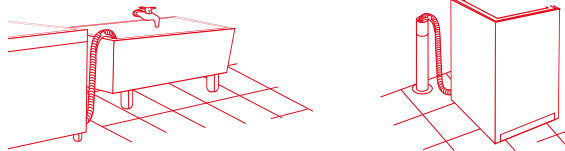

CONTROL PANEL DESIGN

Control panel design

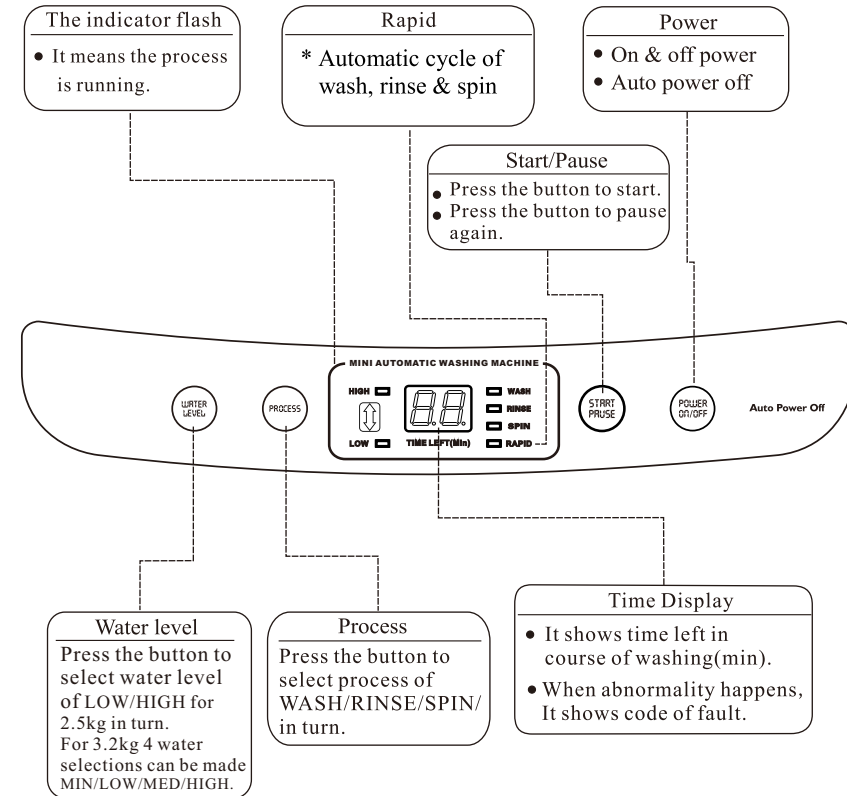

⚠ In order to protect controller, the interval of switching on and off power should be more than 30 seconds.