

THUNDER

CONGRATULATIONS ON THE PURCHASE OF YOUR THUNDER LED HEADLIGHT REPLACEMENT KIT

For your personal safety read, understand
and follow the information provided in this
instruction manual.

FOR OFFROAD USE ONLY




Connection to your Weekend Escape

SPECIFICATIONS


OPERATING VOLTAGE	12 / 24 Volts
LUMENS PER GLOBE	2,000 Lumens
IP RATING	IP65
LIGHT SOURCE MODEL	Luxeon ZES
COLOUR TEMPERATURE	6,500K
HEAT SINK	Aviation aluminium 6063
OPERATING LIFE	>3,000 hours
OPERATING TEMPERATURE	-40°C - +80°C

FOR OFFROAD USE ONLY


GLOBE INSTALLATION

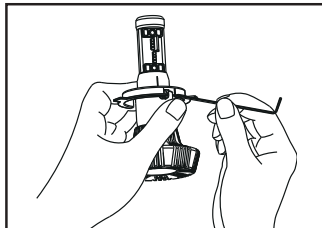


To remove the heat sink, first undo the grub screw with the supplied Allen key.

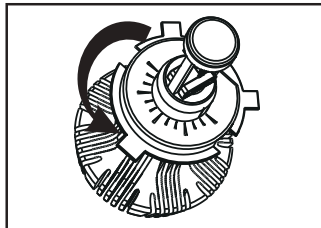


The heat sink will unscrew from the globe. Note: it is a long thread.

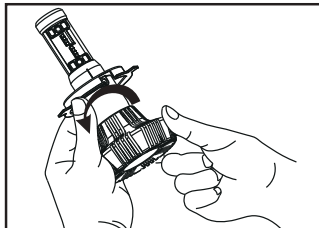


Remove the heat sink. It does not have to be removed from wiring & connector.

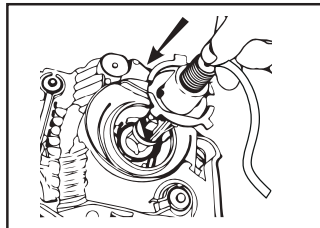


Once original headlight globe is removed, install the globe into the headlight fitting.

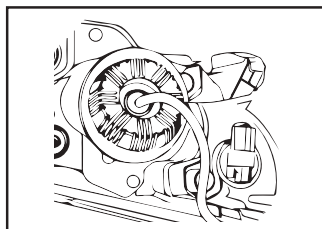

Screw heat sink back onto the globe body & tighten the grub screw.

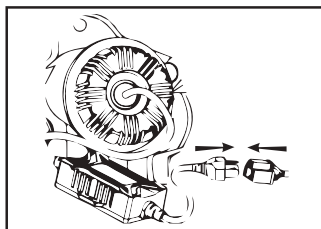

Connect wiring to the vehicle.

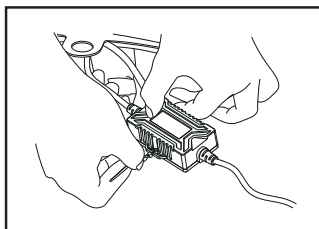

Secure LED controller to the vehicle.



GPC Asia Pacific Pty Ltd
ABN 97 097 993 283

51-57 Qantas Drive
Brisbane Airport QLD 4007
AUSTRALIA

thunderauto.com.au // thunderauto.co.nz

