

IMPORTANT SAFETY WARNINGS


Please read the instruction manual carefully before using the espresso machine to avoid damaging or misusing the product.

- 1. Only for personal use.
- Ensure you have all the correct parts of the product once you open the package.
- 3. The product contains small parts and plastic bags. Keep out of the reach of children.
- 4. Do not let children operate this machine.
- 5. Please do not drink directly from the machine to avoid the risk of burning.
- Please do not place on gas, electrical oven or microwave oven.
- 7. Please do not place this in the dishwasher.

- . Only add water, do not add any other liquids including milk.
- Do not heat the water tank.
- Please ensure you add hot water to the espresso machine. Please boil the water first, then add the hot water to the tank.
- 11. Please clean the machine carefully after each use.
- Please do not use spare parts from other brands except those provided by Thunder, as this may damage the product and will void the warranty.
- 13. In the case of a malfunction, please contact the after-sales service team and stop using the espresso machine. Do not attempt to open and repair the product by yourself, as this will yold the warranty.



COMPONENT VIEW

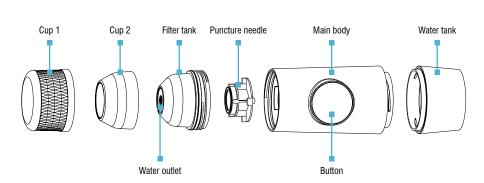



INSTRUCTIONS

1. Open the cup









6. Pour boiling water into the tank









 







INSTRUCTIONS

7. Ensure you tighten the water tank to the main body before pressing the button

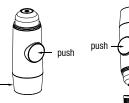

 8. Invert the Thunder
Espresso Machine while
holding it over the cup.
Press button to dispense.

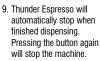



10. Charge the battery using the USB cable that is supplied. A fully charged Thunder Espresso Machine produces up to 50 cups.





CLEANING

Please carefully clean all the individual components of the machine and remove the coffee residue.







WARNING

- Do not let water reach the highlighted area to avoid damage.
- Do not put the product or any spare part in the dishwasher.





ADDITIONAL INFORMATION

SAFETY APPROVAL

All Thunder machines have been tested and are provided with food safety approval.

ENVIRONMENTAL PROTECTION

Packages and spare parts can be recycled.

DISPOSAL

Thunder machines are made of high quality materials. Please dispose the recyclable spare parts in the recycling bin.



WARRANTY TERMS & CONDITIONS

When you acquire or fit a Thunder product you have the peace of mind in knowing that it is backed by a comprehensive 12 month warranty against defects in materials and workmanship. The Thunder warranty is provided in addition to any rights you may have under the Australian Consumer Law.

All claims under this warranty should be made by returning the product to the place of purchase at your expense, with the detail of the fault, proof of purchase and fitment details. If we determine that a Thunder product is defective in materials or workmanship during the warranty period, we will either repair or replace the unit.

This warranty does not apply to failure or damage to a Thunder product caused by incorrect or faulty fitment, accidental or intentional damage, failure of other products, incorrect application, incorrect voltage, environmental damage, operation of the product outside of its environmental and technical specifications, or repair or modification carried out by anyone other than an authorised repairer.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



