



Hob

330-340-345 Series

User Manual

DECLARATION OF CONFORMITY

We: THETFORD Ltd

Address: Unit 6 Brookfields Way, Manvers, Rotherham, S63 5DL

Telephone: (+44) (0) 844 997 1960. Fax: (+44) (0) 844 997 1961

Declare under our sole responsibility that;

Product Types; Domestic build-in LP Gas and dual fuel cooking appliances;

Model Number/Description; SHB353xx Series Hobs & SCU353xxx Series Combination Hobs; SHB33000 to SHB33099 Triangular Hobs & SHB34000 to SHB34599 Rectangular Hobs; SHB140xx, SHB144xx, SHB143xx, SHB145xx & SHB142xx Series Argon Gas & Dual Fuel Hobs; SHB174xx & SHB172xx Series Linear Gas & Dual Fuel Hobs;

Are in conformity with the relevant European Union harmonization legislation, Regulation (EU) 2016/426, which applies as from 21 April 2018 and are manufactured in accordance with the harmonised European standards; EN 30-1-1:2008+A3:2013 & EN 30-2-1:2015;

Satisfy the essential requirements of the Low Voltage Directive 2014/35/EU, where applicable and are manufactured in accordance with the harmonised European standards; EN 60335-1 (IEC 60335-1:2010); EN 60335-2-6 (IEC 60335-2-6:2002 +A1:2004 +A2:2008); EN 60335-2-102 (IEC 60335-2-102:2006 +A1:2010);

Satisfy the essential requirements of the Electro Magnetic Compatibility Directive 2014/30/EU and are manufactured in accordance with the harmonized European standards; EN 55014-1: 2006 + A1:2009 + A2:2011 & EN55014-2: 1997 + A1:2001 + A2: 2008; EN 61000-3-2:2006 +A1:2009 & EN 61000-3-3:2013 where applicable;

We also declare that the production of each specific model will be in conformity with the type as described in the EC type-examination certificate;

CE 680544, Issued by BSI

We also declare that the production of each specific model will be in conformity with the type as described in Test Report(s):

8515933, 8432405, TR 14/404 & TR 15 049 as applicable, Issued by BSI

Name : **Bartho Anderson**
Title/Position : Director
Place & Date of Issue : Rotherham 23rd February 2018

Signature :



EN

Original User Manual

Contents

1	Introduction.....	2
2	Symbols.....	2
3	Safety.....	3
4	Main components.....	5
5	Before use.....	5
6	Use of the burners.....	6
7	Safe cooking.....	7
8	Maintenance and cleaning.....	7
9	Gas leaks.....	8
10	Trouble shooting.....	8
11	Servicing.....	9
12	Putting in storage.....	9
13	Technical specifications.....	10
14	Questions.....	10
15	Warranty.....	10

1. Introduction

This is the user manual for your Thetford hob. Read the safety instructions and information on use and maintenance of the hob carefully before continuing. This will enable you to use the hob safely and efficiently. Retain this manual for future reference.

2. Symbols

Key to symbols:



Warning. Risk of injury and/or damage.



Caution. Hot surface. Risk of injury and/or damage.



Attention. Important information.



Note. Information.

3. Safety

EN



Use the appliance for cooking only and not for anything else, for example room heating. This can lead to carbon monoxide poisoning and overheating of the hob. The manufacturer cannot be held liable for damage resulting from improper use or incorrect setting of the controls.



The use of this gas cooking appliance results in the production of heat, moisture and products of combustion in the room in which it is installed. Ensure the room has sufficient ventilation when the appliance is in use. During prolonged use, additional ventilation may be needed by opening a window or increasing the extraction force of the hood.










This appliance may be used by children aged 8 years or older and persons with reduced physical, sensory or mental capabilities and/or lack of experience and knowledge only if they are supervised or have been given instructions on the safe use of this appliance and understand the potential hazards.



The burners and pan supports are hot during and after use. Allow all parts to cool before touching them, as this can cause serious injury.




Never extinguish a cooking fire with water. Turn the burner off and cover the flame with a lid or a fire blanket.

-  Keep children younger than 8 years away from the appliance, except under constant supervision.
-  Do not allow children to play with the appliance.
-  Do not allow children to clean or maintain this equipment unattended.
-  Use only parts supplied by the manufacturer.
-  Do not change or adjust anything on the appliance, unless the change is authorised by the manufacturer or its representative.
-  Do not store items on the cooking surface.
-  Do not shut the glass lid when the burners are lit or still warm.



4. Main components


SHB330

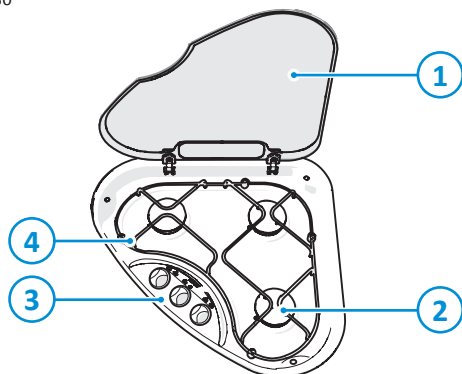

1. Glass lid
2. Burners
3. Control panel
4. Pan supports

EN

SHB340/345

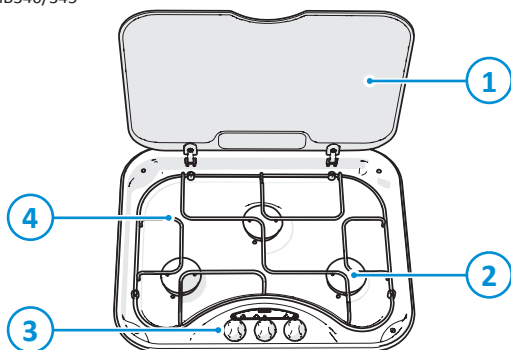

1. Glass lid
2. Burners
3. Control panel
4. Pan supports

The types of burners may vary depending on the type of appliance. Refer to Table 1: Burner specifications on page 10 for further details.

5. Before use

Before using the appliance:


- Ensure that all packaging materials have been removed;
- Clean the appliance with warm water and household detergent and dry carefully with a soft cloth;
- Ensure that the pan supports are positioned properly;
- Ensure that the gas supply is connected and turned on;

- Ensure that the appliance is connected to the 12V DC battery (for ignition models only);
- Ignite the burners and let them burn to expel odours and vapours first.



Only use LPG (Liquefied Petroleum Gas). The appliance operates on propane or butane. Propane is preferred over butane, because butane provides poor performance at an ambient temperature below 10°C and cannot be used at an ambient temperature below 5°C.

6. Use of the burners

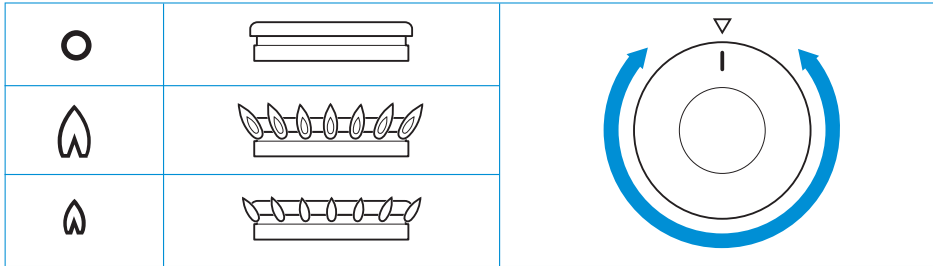

For the exact location of the control knobs see Main components on page 5.

Turning on:

- Push and turn the control knob;
- Turn the control knob anti-clockwise to the full rate position;
 - The automatic burner ignition sparks and lights.
 - For non-ignition models hold a lit match or gas match to the burners.
- Keep the control knob pressed for about 10-15 seconds and then release it;
- Adjust the height of the flame.

Turning off:

- Turn the control knob clockwise to the 0 position to turn off the burner.



If the burner accidentally extinguishes turn the control knob to the 0 position and wait at least 1 minute before re-igniting the burner.




If the burner has not lit within 15 seconds turn the control knob back to the 0 position and release it. Wait at least 1 minute and repeat the steps above to turn on the appliance.


7. Safe cooking

- Do not allow cooking vessels to overlap the edges of the appliance - use the correct sizes of pans and position them centrally over the burners;

SHB330

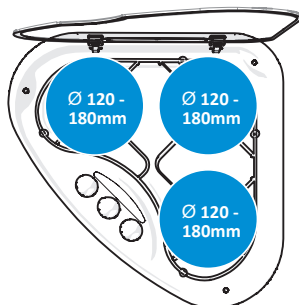

SHB340/SHB345

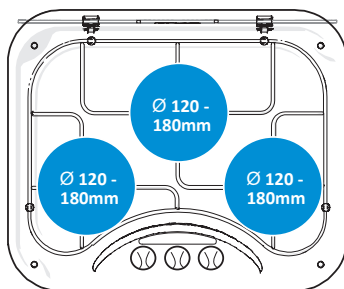

- Ensure that there is at least a 10mm gap between the pans and the edges of the hob;
- Turn the pans so that the handles do not overhang the front of the appliance;
- Ensure that the flame heats the bottom of the pan, not the sides;
- Do not leave the hob unattended when in use;
- Do not use the appliance whilst the vehicle is moving;
- Turn the control knobs back to the 0 position after cooking;
- Keep the hob clean and prevent accumulation of grease and food scraps.

8. Maintenance and cleaning

Thetford recommends an annual inspection service by an approved service centre. Between annual servicing clean the hob regularly after use:

- Always remove any spills or contamination immediately after use with soap and hot water. Towel dry the surface with a soft cloth.
- Use a non-abrasive multi-purpose cream cleaner and a nylon scourer pad to clean more stubborn dirt or grease.

- Use a proprietary stainless steel cleaner or polish to remove superficial surface scratching.



Always clean in the direction of the brushed finish and not across the grain.



Do not use abrasive cleaners, metal scouring pads or hard brushes. They could damage the hob.



Do not leave wet cloths, cleaning pads, residues of food or cleaning products or other dirt to dry on the surface. It can cause pitting, marking or even rusting.



If you clean the burner rings, ensure that the holes are not clogged.



Cleaning agents containing bleach should not be left in contact with stainless steel.



The control knobs can be removed for cleaning. The knobs are easy to replace.



Mineral content in water (such as Iron or Lime scale) can affect the appearance of the metal.

9. Gas leaks

As soon as you smell gas:

- Ensure that all burners are turned off;
- Extinguish all naked lights and do not smoke;
- Shut off the gas supply at the gas bottle immediately;
- Do not use electrical switches;
- Open all doors and windows.



LPG is heavier than air. Escaping gas accumulates at lower levels. By following the strong, unpleasant smell of gas, you can determine where the leak is located. To investigate where it is exactly, use a special leak detection spray. Never use an open flame to find the leak!

10. Trouble shooting

Problem	Possible cause	Solution
Burners don't burn or burn unevenly	Gas bottle is empty Gas tap is closed Burner caps are not correctly positioned Burners are wet or clogged	Fill bottle Open tap Allow caps to cool, then reposition them Dry or clean burners
Automatic ignition does not spark	12V DC battery is discharged Connections are loose	Charge battery Secure connections

Problem	Possible cause	Solution
	Ignition points are wet or dirty	Dry or clean ignition points
Control knobs do not function	Knobs are mounted incorrectly	Install knobs correctly




If you cannot solve a problem, contact the authorised local Service Centre or Thetford Customer Service in your country.

11. Servicing

EN

All servicing must be carried out by an approved competent person. Before any service work is started the appliance should have been left to cool and be disconnected from both the gas and electrical supplies. After each service the appliance must be checked for gas soundness.

For service, please contact your authorised local Service Centre giving details of the model and serial number on the data badge plus date of purchase.








 

Model Name & Series Number			
G30	CAT I ₃ + (28/30-37)	CAT I ₃ B/P(30)	THETFORD
G31	BJTANE 28-30mbar	BUTANE 30mbar	
EQn	Power kW (g/hr)	Model Number	Spark Ignition
CE	Pin Number	Serial Number	Voltage ~ 50Hz
	Country Codes 1	Country Codes 2	Power kW
			QC Pass
			Order No

12. Putting in storage

- Close the gas valve at the gas bottle;
- Disconnect the battery;
- Ensure that all control knobs are in the 0 position;
- Wipe the appliance clean and dry;
- Close the glass lids.

13. Technical specifications

Table 1: Burner specifications

	SHB330			SHB340			SHB345		
	Gas input		Injector	Gas input		Injector	Gas input		Injector
									
	kW	g/hr	mm	kW	g/hr	mm	kW	g/hr	mm
Semi-Rapid Burner	1.5	107	0.61	1.5	107	0.61	1.5	107	0.61
Semi-Rapid Burner	1.5	107	0.61	1.5	107	0.61	1.5	107	0.61
Semi-Rapid Burner	1.5	107	0.61	1.5	107	0.61			
Rapid Burner							2.5	179	0.77
Total	4.5	321		4.5	321		5.5	393	



This appliance is suitable for use with LPG (Liquefied Petroleum Gas) and should not be used on any other gas.



This appliance must be earthed.

14. Questions

If you have questions about the hob, parts, accessories or authorised services:

- Visit www.thetford-europe.com
- If you cannot solve a problem, contact the authorised local Service Centre or Thetford Customer Service in your country.

15. Warranty

Thetford BV offers the end users of its products a three-year warranty. In the case of malfunction within the warranty period, Thetford will replace or repair the product. In this situation, the costs of replacement, labour costs for the replacement of defective components and/or the costs of the parts themselves will be paid for by Thetford.

Purchased spare parts carry a one-year warranty. Any fitting and/or labour costs are not covered by warranty.

1. To submit a claim under this warranty, the user must take the product to an authorised Thetford Service Partner. The claim will be assessed there.
2. Components replaced during repair under warranty become the property of Thetford.

3. This warranty does not prejudice current consumer protection laws.
4. This warranty is not valid in the case of products that are used for commercial purposes.
5. Warranty claims falling into one of the following categories will not be honoured:
 - The product has been improperly used or the instructions in the manual have not been followed;
 - The product has not been installed in accordance with the instructions;
 - Modifications have been made to the product;
 - The product has been repaired but not by an authorised Thetford Service Partner;
 - The serial number or product code has been tampered with or removed;
 - The product has been damaged by misuse.