

THUNDER

Connection to your Weekend Escape

8 WAY TOUCH SWITCH PANEL - TDR11049

White wire: This is the switch backlight dimmer wire. If left unconnected, the backlight will display at full brightness. To reduce brightness, apply to positive for a few seconds and the backlight will dim.

Yellow wire: When connected to positive, it keeps memory of which switches were turned on when the main switch was turned off.

Red wire: This is the main positive to the switch panel, depending on how you would like to operate this switch you can connect this to permanent or auxiliary positive power.

