

# Fitting Instructions



SKU

PRODUCT

**T4T540**

**TAG Heavy Duty Towbar to suit  
Toyota Landcruiser (03/2007 - on)**



## Example Image Only

Towbars are designed specifically for each vehicle and may differ from the example above



Scan for latest version of these instructions

## SPECIFICATIONS

- Towbar Class: Heavy Duty
- Towing Capacity: 3500kg

## IN THIS GUIDE

- Fitment Instructions
- Torque Settings
- Warranty Info

## Step-By-Step Instructions

### Warning:

- This product is for towing purposes only and must only be loaded as shown in your vehicle Owner's Manual.
- This towbar is NOT to be drilled, cut, welded, or modified in any way.
- Check behind chassis rail and body panels before drilling to ensure no hazards are present
- All load ratings shown are under the assumption your trailer has a functional braking system installed
- When installed in positions other than the one depicted in these instructions the Tow Ball Mount may interfere or obstruct certain features of your vehicle (tailgate opening, Chassis clearance, etc.)

### General:


- Before fitting this towbar read fitting instructions and check installation hardware is correct.
- Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar. (Tray, Canopy, Suspension etc.)
- After drilling, blow any filings clear, remove any swarf and treat exposed metal with a rust inhibitor.
- The high tensile fasteners supplied with this product are an integral feature to achieving the specified rating, if replacement is required ensure that fasteners of the same grade (8.8) & quality are used. Contact an authorised TAG distributor or the TAG fitment centre - (07) 3208 3022 - if further information is required.

### Towbar Maintenance and Care:

It is recommended, when not in use, the Tow Ball Mount assembly and class 4 Pin and Clip is stored inside the car away from moisture to prevent standing water from forming rust. Inspect to ensure, on regular basis, fasteners are torqued to the specifications below and in good condition.

**Ensure that the fitting instructions are read and understood prior to fitment  
Place these instructions in the vehicle's glovebox after installation is completed**

# Towbar Fitting Instructions

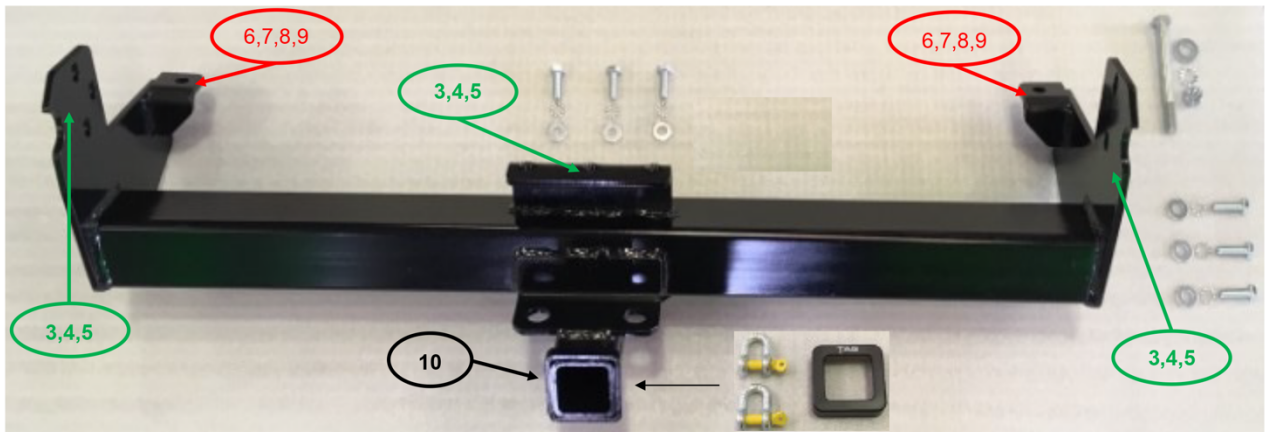

<i><u>Item Number</u></i>	<i><u>Item</u></i>	<i><u>Quantity</u></i>
1	Towbar – T4T540	1
2	Ball Mount – L4045	1
3	M10 x 1.25 x 30 Bolt	9
4	M10 Shake proof washer	9
5	M10 Flat Washer	9
6	½" x 5" UNC Bolt	2
7	M12 Shake proof washer	2
8	½" Flat washer	2
9	½" UNC Nut	2
10	Class 4 Pin	1

Tools required: Spanners, Sockets, Screwdriver, Torque wrench

# Towbar Fitting Instructions



## Step 1. Fit Towbar

- a. Remove the centre aluminium step from the bumper and retain.
- b. Remove 3x M10 from the outside of each chassis rail and discard.
- c. Lift towbar up to the outside of the chassis and secure the bar loosely with 3x M10x 30 bolts with washers.
- d. Secure the centre of the towbar to the underside of the cross member with the remaining 3x M10 bolts with washers.
- e. Tighten all bolts to the torque specification on page 2.
- f. Using holes in chassis base plates as a guide, drill 13mm holes into bottom of chassis. (long drill bit required).
- g. Insert 5x 1/2" bolt with washers from underneath and secure on top of chassis rail with nuts & washers. Tighten to M12 torque specs.
- h. Mark the aluminium step section for cutting. 175mm (W) x 40mm (D). Cut using an air saw or similar.
- i. Refit to step section to bumper.
- j. Fit the plastic receiver cover
- k. Insert the ball mount & secure with the pull pin & clip.

## Step 2. Fit Ball Mount and Apply compliance Label

- a. Apply one of the compliance labels to the pillar of the driver's door. Leave the remaining label & the fitting instructions in the vehicle handbook...



# Towbar Fitting Instructions



## Torque table for bolt tightening

Diameter	Pitch	Grade	Torque	Unit
M8	1.25	8.8	29	Nm
M10	1.25	8.8	57	Nm
M10	1.50	8.8	44	Nm
M12	1.25	8.8	101	Nm
M12	1.50	8.8	97	Nm
M12	1.75	8.8	77	Nm
M14	2.00	8.8	122	Nm
M16	2.00	8.8	190	Nm
<b>Imperial Bolt Torque Settings</b>				
$\frac{3}{8}$ "	UNC	8	44.75	Nm

## TAG Warranty Statement

SWD warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the intended purpose.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us direct by phone on 1300 669122 or visit [www.swd.com.au](http://www.swd.com.au)