




**INSTALL TIME: 5 Mins**

# 1 FIT YOUR TELESCOPIC LADDER BRACKETS

You will need:

- 13 mm Socket Wrench

**(A)** Decide where on your Rack you would like to mount your Telescopic Ladder Brackets. On the chosen side, slide four M8 Nyloc Nuts, dome side down, into the U-channel through the gap in the corner of the Tray as shown. Slide the four Nyloc Nuts down the U-channel and into position.

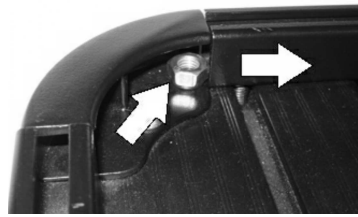

**(B)** Place the two Brackets over the Nyloc Nuts inserted in Step 1A, lining up the holes in the Bracket with the Nyloc Nut. Loosely fasten the Bracket to the Rack using the M8 x 20 Hex Bolts and M8 Flat Washers supplied.



**(C)** Slide the Brackets across into their required position and space according to your ladder as shown. Once happy with the position of the Brackets and ladder, fasten the four Button Head bolts.



**(D)** Congratulations, you have completed your installation. Take a step back and admire your work. Good Job!