



INSTALL TIME: 30 Minutes

1 GET ORGANIZED


you will need:

- Land Rover Defender
- Drill machine
- 3 mm Drill bit
- Marking pen
- Star screw driver
- Hammer
- Centre punch

2 INSTALL REAR TAIL LIGHT PROTECTORS


A)

Place the tail light protector over the light, making sure the three ribs as indicated are horizontal. Repeat step on the other lights.

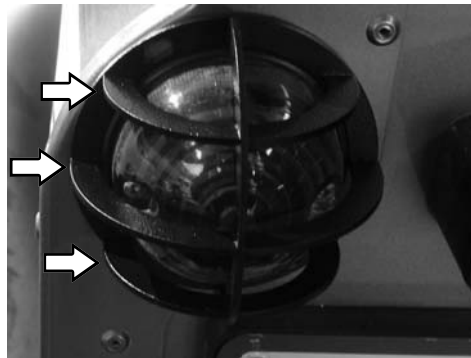


B)

Using a marking pen, mark the two holes. Repeat step for the other lights.

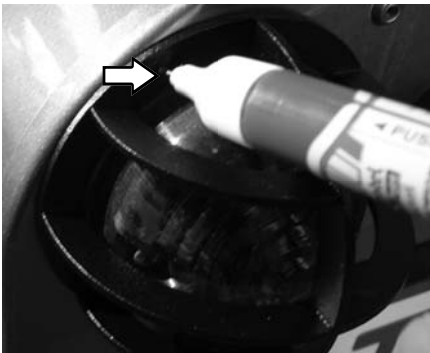

C)

Using a centre punch and a hammer, mark in the centre of the two marks. Repeat step for the other lights.

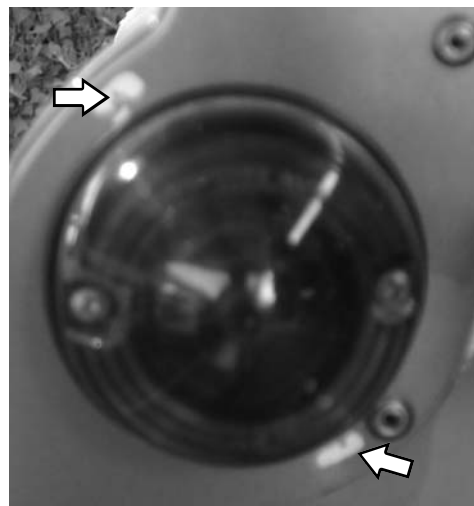

2 INSTALL REAR TAIL LIGHT PROTECTORS CONT....

D)

Using a drill machine and a 3 mm drill bit, drill the two marked holes. Repeat step for the other lights.



E)

Place the protector cover over the lights, lining up the holes. Using a star screw driver, fit the tail light protectors to the vehicle with the self tapping screws provided. Repeat step for the other lights.



Note: Make sure the big light cover lines up with the small light cover as indicated.

Congratulations, you have completed the rear Tail Light Protector installation.

Modifying your vehicle involves some risks and may void certain aspects of your vehicle's warranty.